

Koordinater

Anleggets midtpunkt

	N		Ø	
	°	Min	°	Min
Midtpkt anlegg	68	34,460	14	57,663
Midtpkt flåte	68	34,456	14	57,501

Anleggsramme hjørnepunkter

	N		Ø	
	°	Min	°	Min
NV	68	34,475	14	57,543
NØ	68	34,469	14	57,786
SØ	68	34,445	14	57,782
SV	68	34,451	14	57,539

Flåte hjørnepunkter

	N		Ø	
	°	Min	°	Min
FNV	68	34,460	14	57,487
FNØ	68	34,459	14	57,516
FSØ	68	34,451	14	57,514
FSV	68	34,452	14	57,485

Anleggsanker

	N		Ø	
	°	Min	°	Min
1	68	34,478	14	57,440
2	68	34,494	14	57,445
3	68	34,534	14	57,552
4	68	34,533	14	57,595
5	68	34,532	14	57,634
6	68	34,531	14	57,674
7	68	34,530	14	57,713
8	68	34,529	14	57,754
9	68	34,528	14	57,797
10	68	34,485	14	57,957
11	68	34,465	14	57,964
12	68	34,441	14	57,960
13	68	34,420	14	57,946
14	68	34,412	14	57,777
15	68	34,414	14	57,734
16	68	34,415	14	57,695
17	68	34,416	14	57,655
18	68	34,417	14	57,616
19	68	34,426	14	57,577
20	68	34,430	14	57,536
21	68	34,450	14	57,464

Flåte anker

	N		Ø	
	°	Min	°	Min
F1	68	34,448	14	57,452
F2	68	34,476	14	57,433
F3	68	34,478	14	57,548
F4	68	34,448	14	57,591
F5	68	34,439	14	57,534